1 Electrolux

Libero Line Series Cast Iron Panini Grill - 1 Zone

ITEM #		
MODEL #		
NAME #		
SIS #		
A1A #		



Libero Line Series

Cast Iron Panini Grill - 1 Zone

602117 (PGRR1) 1 Zone Panini Grill, ribbed top

and bottom - 230V/1/50

602118 (PGRS1) 1 Zone Panini Grill, ribbed top, smooth bottom - 230V/1/50

1 Zone Panini Grill, smooth top and bottom - 230V/1/50 602119 (PGSS1)

Short Form Specification

Item No.

Unit to be Electrolux Libero Line 1 zone Panini Grill. Electrical characteristics to be _ V Single phase. Thanks to its small size, it is easy to ahndle and to position, offering at the same time a large cooking surface. It is available in three versions: with smooth top and bottom plate, with ribbed top and smooth bottom plate or with ribbed top and bottom plate.

Main Features

- · Available in 3 different versions:
 - top and bottom ribbed surface
 - -top and bottom smooth surface
- -top ribbed surface and bottom smooth surface
- cast iron plates covered in vitreous enamel coating, making them scratch and rust proof and ensuring hygiene. They are acid and salt proof and resistant to oxidation.
- Stainless steel 430 construction.
- Shock-proof heating elements.
- · Mounted inside the plate for a perfect thermal conductivity.
- . Adjustable thermostat up to 300 °C
- · Self-balancing upper plate adjusts to different heights to reduce cooking times and double performance.
- Made of stainless steel AISI 430 and the cooking surface is made of a special cast iron treated with verified food enamel, this guarantees hygienic conditions and high resistance to acids, salts and oxidation processes.
- Top plate shut-off switch standard.

APPROVAL:

Electrolux

Libero Line Series Cast Iron Panini Grill - 1 Zone

Top

EI = Electrical connection

V = Air vents

Side

Electric

Supply voltage:

602117(PGRR1)230 V/1 ph/50 Hz602118(PGRS1)230 V/1 ph/50 Hz602119(PGSS1)230 V/1 ph/50 Hz

Plug type:

Key Information

External dimensions, Height	235 mm		
External dimensions, Width	260 mm		
External dimensions, Depth	435 mm		
External dimensions, Weight	15 kg		
Net weight:	15 kg		
Productivity in food type quantity per hour			
Panini:	20		
Grilled vegetable slices:	60		
Minute steaks:	30		
Chicken-Beef steaks:	50		
Hamburgers:	30		
	00		

When cooking meat products, the top plate should be in contact with the food surface.

FIRST USE OF THE MACHINE

- When the machine is delivered, the steel surfaces are protected with a nylon anti-scratch film. This film has to be removed.
- The insulating materials used during the manufacturing and the residuals of grease due to the mechanical installation of single parts, heat and produce smoke, for this reason, it is necessary to start the machine at maximum temperature for 15-20 minutes.

GENERAL CLEANING

- Clean the grill at least once a day and, if necessary more often.
- All the machine parts that are in contact with the product must be cleaned.
- Never clean the machine by means of compressed water or water jets.
- Cleaning can be performed when surface is hot, scrape with a metallic brush on the cooking grid several times.
- Empty the grease tray.
- It is advisable to perform these cleaning operaions when the grill temperature is at minimum so that the residual grease that sticks to the grid can melt.
- Do not pour water or other liquids on the grill when it is hot, because the changes of temperature can provoke their breaking.







